

# CONTENTS

# CONTENTS

FOREWORD .....	OF- 2
CONTENTS.....	OC- 2

	FIG. NO	PAGE
<b>AA [ENGINE]</b>		
CYLINDER HEAD .....	A1010-A0A1	030010
ENGINE HANGER .....	A1050-A0A1	030020
HEAD COVER.....	A1110-A0A1	030030
BREATHER ND HOSE.....	A111V-A0A1	030040
AIR INTAKE CONNECTION ABD EXHAUST MANIFOLD .....	A1310-A0A1	030050
TURBOCHARGER OIL PIPING.....	A1530-A0A1	030060
THERMOSTAT AND THERMOSTAT HOUSING .....	A1730-A0A1	030070
CYLINDER BLOCK.....	A2010-A0A1	030080
FRONT COVER .....	A2040-A0A1	030090
CAMFLOWER COVER .....	A2060-A0A1	030100
OIL FILTER (WITHOUT FILLER) .....	A2070-A0A1	030110
OIL PAN.....	A2110-A0A1	030120
OIL LEVEL GAUGE.....	A2110-B0A1	030130
FLYWHELL HOUSING .....	A2210-A0A1	030140
FLYWHELL.....	A2250-A0A1	030150
CRANCSHAFT .....	A2310-A0A1	030160
DAMPER .....	A2330-A0A1	030170
PISTON .....	A2350-A0A1	030180
ROCKER ARM .....	A2410-A0A1	030190
CAMSHAFT AND TAPPET .....	A2510-A0A1	030200
OIL PUMP .....	A3010-A0A1	030210
OIL FILTER AND OIL COOLER .....	A3310-A0A1	030220
FUEL INJECTION PUMP MOUNTING .....	A4010-A0A1	030230
FUEL INJECTION PPING AND SPILL PIPE .....	A4030-A0A1	030240
FUEL INJECTION PUMP LUBRICATOR .....	A4050-A0A1	030250
FUEL TRANSFER PUMP.....	A4170-A0A1	030260
FUEL FILTER .....	A4180-A0A1	030270
INJECTION NOZZLE .....	A4210-A0A1	030280

	FIG. NO	PAGE
SOLENOID .....	A451P-A0A1	030290
WATER PUMP .....	A5010-A0A1	030300
WATER INLET CONNECTION.....	A5030-A0A1	030310
FAN DRIVE .....	A5060-A0A1	030320
TENSION PULLEY .....	A5080-A0A1	030330
ALTERNATOR MOUNTING (40A).....	A6010-A0A1	030340
STARTING MOTOR MOUNTING (5.5KW) .....	A6210-A0A1	030350

## B0[ENGINE RELATED PARTS]

HEATER SWITCH .....	B0000-01A0	030010
AIR CLEANER .....	B0000-02A0	030020
PRE CLEANER.....	B0000-03A0	030030
AIR CLEANER CAP .....	B0000-03A1	030031
HEAT SHIELD .....	B0000-04A0	030040
MUFFLER .....	B0000-05A0	030050
WATER TEMPERATURE SENSOR (WITH MONITORPANEL) .....	B0000-06A0	030060
OIL FILLER .....	B0000-07A0	030070
OIL PAN.....	B0000-08A0	030080
FLYWHEEL HOUSING.....	B0000-09A0	030090
MOUNT BRACKET .....	B0000-10A0	030100
PRESSURE SWITCH .....	B0000-11A0	030110
FUEL FILTER .....	B0000-12A0	030120
COOLING FAN (BLOWER TYPE).....	B0000-13A0	030130
CORROSION RESISTER .....	B0000-14A0	030140
STARTING MOTOR SWITCH .....	B0000-15A0	030150
STARTING MOTOR MOUNTING (5.5KW) .....	B0000-16A0	030160
SAFETY GUARD .....	B0000-17A0	030170
ENGINE MOUNT .....	B0100-01A0	030180
ENGINE WIRING .....	B0500-01A0	030190
DAMPER .....	B0600-01A0	030200

## C0[COOLING SYSTEM]

COOLING (WITH AIR CONDITIONER) .....	C0100-01A0	060010
--------------------------------------	------------	--------

	FIG. NO	PAGE
COOLING (WITH AIR CONDITIONER) .....	C0100-01A1	060020
COOLING (WITH REVERSIBLE FAN) .....	C0100-01A2	060030
COOLING (HOUSE, MOUNT, RESERVE TANK) .....	C0100-02A0	060040
COOLING (SANDY DUSTY PROTECTION GRID) .....	C0100-03A3	060050

#### D0[FUEL TANK AND RELATED PARTS]

FUEL TANK (FOR MONITOR PANEL) .....	D0100-01A0	090010
FUEL LINE .....	D0200-01A0	090020
ADDITIONAL FUEL STRAINER AND WATER SEPARATOR .....	D0210-01A0	090030

#### E0[ELETRICAL SYSTEM]

BATTERY .....	E0110-01A0	120010
VEHICLE WIRING .....	E0200-01A0	120020
VEHICLE WIRING (TEMPERATURE SENSOR WIRING) .....	E0200-02A0	120030
VEHICLE WIRING (WITHOUT FAN CONTROLLER) .....	E0200-03A0	120040
VEHICLE WIRING (RELAY) .....	E0200-04A0	120050
BATTERY WIRING .....	E0210-01A0	120060
VEHICLE LAMP .....	E0300-01A0	120070
WORK LAMP (FRONT) .....	E0310-01A0	120120
WORK LAMP (REAR) .....	E0310-02A0	120130
ADDITIONAL REAR LAMP .....	E0320-01A0	120080
ADDITIONAL FRONT AND REAR LAMP (LAMP AND WIRING) .....	E0320-01A1	120081
BACK-UP ALARM .....	E0420-01A0	120090

#### F0[TRANSMISSION]

UNIVERSAL JOINT .....	F2200-01A0	150010
POWER LINE (POWER LINE MOUNT) .....	F2300-01A0	150020
POWER LINE (BEVEL GEAR AND SHAFT) .....	F2300-02A0	150030
POWER LINE (CLUTCH AND BRAKE) .....	F2300-03A0	150040
POWER LINE (CASE) .....	F2300-04A0	150050
POWER LINE (STEERING CASE AND BRAKE VALVE PIPING) .....	F2300-05A0	150060
POWER LINE (PRIORITY VALVE PIPING) .....	F2300-06A0	150070
POWER LINE (OIL LINE) .....	F2300-07A0	150080
POWER LINE (CHECK LINE) .....	F2300-08A0	150090

	FIG. NO	PAGE
POWER LINE (BRAKE CONTROL 1/2) .....	F2300-09A0	150100
POWER LINE (BRAKE CONTROL 2/2) .....	F2300-10A0	150110
POWER LINE (BRAKE CONTROL BRACKET) .....	F2300-11A0	150120
POWER LINE (TRANSMISSION CONTROL) .....	F2300-12A0	150130
POWER LINE (STEERING PISTON) .....	F2300-13A0	150140
POWER LINE (BRAKE VALVE) .....	F2300-14A0	150150
POWER LINE (PRIORITY VALVE) .....	F2300-15A0	150160
POWER LINE (BRAKE CYLINDER) .....	F2300-16A0	150170
POWER LINE (TRANSMISSION SUPPORT) .....	F2300-17A0	150180
POWER LINE PIPING (PUMP AND TRANSMISSION) (FOR PAT DOZER) .....	F2300-18A0	150190
POWER LINE PIPING (PUMP AND TRANSMISSION) (FOR ANGLE DOZER) .....	F2300-18A1	150200
POWER LINE PIPING (CASE) .....	F2300-19A0	150210
POWER LINE PIPING (OIL LINE) .....	F2300-20A0	150220
POWER LINE PIPING (CHECK LINE) .....	F2300-21A0	150230
POWER LINE (TRANSMISSION AND BRAKE CONTROL) .....	F2300-22A0	150240
TRANSMISSION (1ST CLUTCH) .....	F2320-01A0	150250
TRANSMISSION (2ND CLUTCH) .....	F2320-02A0	150260
TRANSMISSION (3RD AND FORWARD CLUTCH) .....	F2320-03A0	150270
TRANSMISSION (REVERSE CLUTCH) .....	F2320-04A0	150280
TRANSMISSION (CASE) .....	F2320-05A0	150290
TRANSMISSION (CASE ACCESSORIES PARTS) .....	F2320-06A0	150300
TRANSMISSION (INPUT) .....	F2320-07A0	150310
TRANSMISSION (OUTPUT) .....	F2320-08A0	150320
TRANSMISSION (SHIFT VALVE) .....	F2320-09A0	150330
TRANSMISSION (SHIFT VALVE MOUNT AND VALVE PIPING) .....	F2320-10A0	150340
TRANSMISSION (PRESSURE VALVE) .....	F2320-11A0	150350
TRANSMISSION (FILLER AND PIPING) .....	F2320-12A0	150360
TRANSMISSION (INCHING CONTROL) .....	F2320-13A0	150370
FINAL DRIVE (L.H) .....	F2380-01A0	150380
FINAL DRIVE (R.H) .....	F2380-02A0	150390
FINAL DRIVE (MOUNT) .....	F2380-03A0	150400
POWER LINE OIL LINE (FILTER AND OIL GAUGE) .....	F2730-01A0	150410
POWER LINE OIL LINE (COOLING LINE) .....	F2730-02A0	150420

	FIG. NO	PAGE
TRAVEL CONTROL.....	F2820-01A0	150430
<b>H0[HYDRAULIC SYSTEM]</b>		
HYDRAULIC TANK.....	H0100-01A0	180010
CONTROL VALVE (1-SPOOL) (MOUNT).....	H0120-01A0	180020
CONTROL VALVE (3-SPOOL) (MOUNT).....	H0120-01A1	180030
CONTROL VALVE (4-SPOOL) (MOUNT).....	H0120-01A2	180040
HYDRAULIC PUMP LINE (SUCTION AND VALVE LINE) (FOR PAT DOZER).....	H0310-01A0	180050
HYDRAULIC PUMP LINE (FOR ANGLE DOZER).....	H0310-01A1	180060
HYDRAULIC PUMP LINE (RETURN LINE) (FOR PAT DOZER) .....	H0310-02A0	180070
HYDRAULIC PUMP LINE (OIL COOLER LINE) .....	H0310-03A0	180080
LIFT CYLINDER LINE.....	H2210-01A0	180090
HYDRAULIC PUMP LINE (OIL COOLER LINE) (FOR RIPPER).....	H2210-01A1	180100
TILT CYLINDER LINE .....	H2220-01A0	180110
ANGLE CYLINDER LINE.....	H2230-01A0	180120
REAR HYDRAULIC LINE (FOR RIPPER) .....	H2250-01A0	180130
<b>J0[MAIN/REVOLVING FRAME AND RELATED PARTS]</b>		
MAIN FRAME (PAT DOZER).....	J2100-01A0	210010
MAIN FRAME (ANGLE DOZER).....	J2100-01A1	210020
<b>K0[OPERATOR'S COMPARTMENT AND CONTROL SYSTEM]</b>		
OPERATOR'S SEAT (RIGID TYPE) (LEATHER SEAT).....	K0110-01A0	240010
OPERATOR'S SEAT (TURN AND RECLINING TYPE) (FABRIC SEAT) .....	K0110-01A1	240020
OPERATOR'S SEAT (RECLINING TYPE) (LEATHER SEAT) .....	K0110-01A2	240030
OPERATOR'S SEAT (TURN AND RECLINING TYPE) (LEATHER SEAT) .....	K0110-01A3	240040
OPERATOR'S SEAT (RECLINING TYPE) (WITH HEAD REST).....	K0110-01A4	240050
OPERATOR'S SEAT (RECLINING TYPE) (FABRIC SEAT).....	K0110-01A5	240060
OPERATOR'S SEAT (TURN AND RECLINING TYPE) (FABRIC SEAT) (WITH HEAD REST) .....	K0110-01A6	240070
OPERATOR'S SEAT (RECLINING TYPE) (LEATHER SEAT) (HIBACK).....	K0110-01A7	240080
OPERATOR'S SEAT (RECLINING TYPE) (FABRIC SEAT) (HIBACK).....	K0110-01A8	240090
OPERATOR'S SEAT (TURN AND RECLINING TYPE) (MOUNT) .....	K0110-02A1	240100
OPERATOR'S SEAT (FABRIC SEAT) (AIR SUSPENSION TYPE).....	K0110-02A2	240101

	FIG. NO	PAGE
SEAT FRAME (EXCEPT JAPAN) .....	K0120-01A0	240110
SEAT BELT (FOR SUSPENSION SEAT) .....	K0160-01A1	240120
CAB (BODY).....	K0210-01A0	240130
CAB (DOOR AND DOOR LOCK).....	K0210-02A0	240140
CAB (DOOR) (DUMPER, WINDOW, WIPER) .....	K0210-03A0	240150
CAB (DOOR OPEN LOCK BRACKET) .....	K0210-04A0	240160
CAB (DOOR OPEN LOCK LATCH) .....	K0210-05A0	240170
CAB (WINDOW).....	K0210-06A0	240180
CAB (SASH).....	K0210-07A0	240190
CAB (GRIP).....	K0210-08A0	240200
CAB (ELECTRICAL EQUIPMENT) (SWITCH, ROOM LAMP, WIPER).....	K0210-09A0	240210
CAB (WASHER HOSE).....	K0210-10A0	240220
CAB (RADIO MOUNT BRACKET) (RADIO LESS) .....	K0210-11A0	240230
CAB (INSIDE COVER).....	K0210-12A0	240240
CAB (MIRROR) .....	K0210-13A0	240250
CAB (AIR CONDITIONER DUCT) .....	K0210-14A0	240260
CAB (INSTALLATION PARTS) .....	K0210-15A0	240270
CAB (ENVELOPE PARTS) (1/2) .....	K0210-16A0	240280
CAB (ENVELOPE PARTS) (2/2) .....	K0210-17A0	240290
FLOOR (WITH CAB).....	K0310-01A0	240300
FLOOR (WITHOUT CAB) .....	K0310-01A1	240310
ROPS (WITH CAB) .....	K0410-01A0	240320
REAR VIEW MIRROR.....	K0411-01A0	240355
ROPS (WITHOUT CAB).....	K0410-01A1	240330
AIR CONDITIONER (CONDENSER AND COMPRESSOR) .....	K0710-01A0	240340
AIR CONDITIONER (PIPING BRACKET).....	K0710-02A0	240350
AIR CONDITIONER (COMPRESSOR MOUNT AND CONDENSER WIRING).....	K0710-03A0	240360
AIR CONDITIONER (HEATER LINE).....	K0710-04A0	240370
FIRE EXTINGUISHER .....	K0830-01A0	240380
FIRE EXTINGUISHER (PAKISTAN).....	K0830-01A1	240381
CUP HOLDER (WITHOUT CAB) .....	K0860-01A0	240390
FLOOR FRAME (MOUNT AND PLUG) .....	K2110-01B0	240400
FLOOR FRAME (MOUNT AND PLUG) (WITHOUT CAB).....	K2110-01B1	240410
FLOOR FRAME (FUEL CONTROL) .....	K2110-02B0	240420

	FIG. NO	PAGE
FLOOR FRAME (BLADE CONTROL) (FOR ANGLE DOZER).....	K2110-03B0	240430
FLOOR FRAME (BLADE CONTROL) (1/2) (FOR PAT DOZER).....	K2110-04B0	240440
FLOOR FRAME (BLADE CONTROL) (2/2) (FOR PAT DOZER).....	K2110-04B1	240450
FLOOR FRAME (SPEED CONTROL) (1/2).....	K2110-05B0	240460
FLOOR FRAME (SPEED CONTROL) (2/2).....	K2110-06B0	240470
FLOOR FRAME (STEERING CONTROL) (1/2).....	K2110-07B0	240480
FLOOR FRAME (STEERING CONTROL) (2/2).....	K2110-08B0	240490
FLOOR FRAME (BLADE LOCK) (FOR POWERANGLEPOWER TILT DOZER).....	K2110-09B0	240500
FLOOR FRAME (BLADE LOCK) (FOR ANGLE DOZER).....	K2110-09B1	240510
FLOOR FRAME (TRANSMISSION LOCK LEVER).....	K2110-10B0	240520
FLOOR FRAME (TRANSMISSION LOCK SHAFT).....	K2110-11B0	240530
FLOOR FRAME (ELECTRICAL EQUIPMENT).....	K2110-12B0	240540
FLOOR FRAME (WIRING) (1/2).....	K2110-13B0	240550
FLOOR FRAME (WIRING) (2/2).....	K2110-14B0	240560
FLOOR FRAME (WINDOW WASHER HOSE).....	K2110-15B0	240570
FLOOR FRAME (PILOT VALVE).....	K2110-16B0	240580
FLOOR FRAME (HANDLE) (WITHOUT CAB).....	K2110-17B1	240590
FLOOR FRAME (KNOB).....	K2110-18B0	240600
FLOOR SUSPENTION (VISCOUS MOUNT).....	K2120-01A0	240610
DASHBOARD (WITHOUT CAB) (WITH MONITOR PANEL).....	K2210-01A0	240620
DASHBOARD (CAB) (WITH AIR-CONDITIONER) (AIR-CONDITIONER KIT).....	K2210-01A1	240630
DASHBOARD (WITHOUT CAB) (SWITCH, TIMERAND WIRING).....	K2210-02A0	240640
DASHBOARD (CAB) (WITH AIR-CONDITIONER) (AIR-CONDITIONER MOUNT).....	K2210-02A1	240650
DASHBOARD (CAB) (WITH AIR-CONDITIONER) (AIR-CONDITIONER BOX).....	K2210-03A1	240660
DASHBOARD (CAB) (WITH AIR-CONDITIONER) (FILTER COVER).....	K2210-04A1	240670
DASHBOARD (CAB) (WITH AIR-CONDITIONER) (DASHBOARD).....	K2210-05A1	240680
DASHBOARD (CAB) (WITH AIR-CONDITIONER)(PANEL BOARD).....	K2210-06A1	240690
DASHBOARD (CAB) (WITH AIR-CONDITIONER) (MONITOR).....	K2210-07A1	240700
DASHBOARD (CAB) (WITH AIR-CONDITIONER) (WIRING AND LAMP).....	K2210-08A1	240710
BLADE CONTROL SYSTEM.....	K2241-01A0	240720
BLADE CONTROL SYSTEM (WITH RIPPER).....	K2241-01A1	240730
FLOOR (FLOOR) (WITH DECELERATOR PEDAL).....	K2400-01A0	240740
FLOOR (BRAKE PEDAL) (WITH DECELERATOR PEDAL).....	K2400-02A0	240750
FLOOR (DECELERATOR PEDAL) (WITH DECELERATORPEDAL).....	K2400-03A0	240760

	FIG. NO	PAGE
FLOOR (INCHING PEDAL (WITH DECELERATORPEDAL).....	K2400-04A0	240770
FLOOR (FLOOR MOUNT) (WITH DECELERATOR PEDAL).....	K2400-05A0	240780
ARM REST COVER (UPPER).....	K2500-01A0	240790
ARM REST COVER (LOWER (WITH CAB).....	K2500-02A0	240800
ARM REST COVER (LOWER) (WITH CAB)(FOR RIPPER).....	K2500-02A1	240810
ARM REST COVER (LOWER) (WITHOUT CAB).....	K2500-02A2	240820
ARM REST COVER (LOWER) (WITHOUT CAB) (WITH EXTINGUISHER).....	K2500-02A3	240830
HAND RAIL.....	K2810-01A0	240840
HAND RAIL (FOR CAB).....	K2810-01A1	240850
WINDOW WASHER TANK.....	K2910-01A0	240860

#### M0[GUARD]

RADIATOR GUARD.....	M2110-01A0	270010
RADIATOR MASK (REINFORCED).....	M2120-01A0	270020
FRONT GUARD (ENGINE HOOD) (WITH CAB).....	M2140-01A0	270030
FRONT GUARD (ENGINE HOOD) (WITHOUT CAB).....	M2140-01A1	270040
FRONT GUARD (ENGINE SIDE COVER, UPPER) (WITH CAB).....	M2140-02A0	270050
FRONT GUARD (ENGINE SIDE COVER, UPPER) (WITH PRE-CLEANER) (WITHOUT CAB).....	M2140-02A1	270060
FRONT GUARD(ENGINE SIDE COVER, LOWER) (WITH PRE-CLEANER).....	M2140-03A0	270070
FRONT GUARD (ENGINE HOOD MOUNT).....	M2140-04A0	270080
REAR GUARD (BATTERY COVER).....	M2210-01A0	270090
REAR GUARD (FILTER COVER) (WITH AIRCONDITONER).....	M2210-02A0	270100
REAR GUARD (FILTER COVER).....	M2210-02A1	270110
REAR GUARD (BRACKET).....	M2210-03A0	270120
REAR GUARD (FENDER).....	M2210-04A0	270130
REAR GUARD (NON SLIP).....	M2210-06A0	270140
REAR GUARD (TOOL BOX & BATTERYPLATE & BATTERY, FILTER COVER).....	M2210-07A0	270150
REAR COVER.....	M2240-01A0	270160
REAR COVER (WITH RIPPER).....	M2240-01A1	270170
COVER.....	M2811-01A0	270180
COVER (WITH FRONT HOOK).....	M2811-01A2	270190

	FIG. NO	PAGE
<b>R0[UNDER CARRIAGE]</b>		
FRONT IDLER .....	R0100-01A0	300010
IDLER CUSHION .....	R0120-01A0	300020
TRACK ROLLER (HD LINK) (SINGLE GROUSER).....	R0200-01A0	300030
RACK ROLLER (HD LINK) (DOUBLE GROUSER) (510MM WIDE).....	R0200-02A0	300040
CARRIER ROLLER.....	R0300-01A0	300050
TRACK SHOE (LUBRICATE TYPE) (SINGLE GROUSER) (510MM WIDE) (HD LINK) .....	R0500-01B0	300060
TRACK SHOE (LUBRICATE TYPE) (SINGLE GROUSER) (560MM WIDE) (HD LINK) .....	R0500-01B1	300070
TRACK SHOE (LUBRICATE TYPE) (SINGLE GROUSER, WITH HOLE) (510MM WIDE) (HD LINK) .....	R0500-01B2	300080
TRACK SHOE (LUBRICATE TYPE) (SINGLE GROUSER, (WITH HOLE) (460MM WIDE) (HD LINK) (FOR TRIMMING) .....	R0500-01B4	300090
TRACK SHOE (LUBRICATE TYPE) (SINGLE GROUSER) (510MM WIDE) (HD LINK, AR BUSHING).....	R0500-01B5	300100
TRACK SHOE (LUBRICATE TYPE) (SINGLE GROUSER) (560MM WIDE) (HD LINK, AR BUSHING).....	R0500-01B6	300110
TRACK SHOE (LUBRICATE TYPE) (SINGLE GROUSER) (700MM WIDE) .....	R0500-01B7	300111
ROLLER GUARD (FOR HD LINK) .....	R2200-01A0	300120
ROLLER GUARD (FOR HD LINK) .....	R2200-01A1	300121
ROLLER GUARD (FULL GUARD) .....	R2200-02A0	300130
ROLLER GUARD (FULL GUARD) .....	R2200-02A1	300131
<b>T0[WORK EQUIPMENT]</b>		
DOZER FRAME .....	T2110-01A0	330010
ANGLE FRAME.....	T2110-01A1	330020
ANGLE FRAME (LINK) .....	T2110-02A1	330030
LINK (FOR PAT DOZER).....	T2115-01A0	330040
ARM AND BRACE (FOR ANGLE DOZER).....	T2115-01A1	330050
LINK (CYLINDER PIN) (FOR PAT DOZER) .....	T2115-02A0	330060
BLADE (FOR PAT DOZER).....	T2120-01A0	330070
BLADE (FOR PAT DOZER) (B35111 AND UP) .....	T2120-01A0A	330071

	FIG. NO	PAGE
BLADE (FOR PAT DOZER) (WIDE TYPE).....	T2120-01A1	330080
BLADE (FOR PAT DOZER) (WIDE TYPE) (B35111 AND UP) .....	T2120-01A1A	330081
BLADE (FOR ANGLE DOZER).....	T2120-02A0	330090
BLADE END BIT (STRONG).....	T2121-01A0	330100
DOZER OIL LINE (ANGLE CYLINDER LINE) (FOR PAT DOZER) .....	T2160-01A0	330110
DOZER OIL LINE (TILT CYLINDER LINE AND COVER) (FOR PAT DOZER) .....	T2160-02A0	330120
DOZER OIL LINE (LIFT CYLINDER LINE) (FOR PAT DOZER) .....	T2160-03A0	330130
DOZER OIL LINE (LIFT CYLINDER LINE) (FOR ANGLE DOZER) .....	T2160-04A0	330140
RIPPER (RIGID TYPE) .....	T2400-01A0	330150
HITCH .....	T2810-01A0	330160
DRAWBAR .....	T2810-01A3	330170

#### U0[MARKS AND PLATES]

MARKS AND PLATES (ENGLISH) (FOR U. S. A.).....	U0100-01A0	360010
MARKS AND PLATES (ASIA) .....	U0100-01A3	360011
MARKS AND PLATES (PAKISTAN) .....	U0100-01A3A	360015
MARKS AND PLATES (SPANISH) .....	U0100-01A4	360020
MARKS AND PLATES (INDONESIAN).....	U0100-01A5	360030
MARKS AND PLATES (PORTUGUESE) .....	U0100-01A6	360040
CENTER OF GRAVITY MARK.....	U0400-01A0	360050
ROPS PLATES.....	U0520-01A0	360060

#### V0[ACCESSORY AND TOOL]

SPARE PARTS (MACHINE) .....	V0100-01A0	390010
SPARE PARTS (ENGINE) .....	V0100-01A1	390020
SPARE PARTS (ENGINE MACHINE) .....	V0100-01A2	390030
CAP AND OVERALL .....	V0200-01A0	390040
TOOL.....	V0300-01A0	390050

#### W0[MICELLANEOUS]

VANDALISM PROTECTION (PANEL).....	W2112-01A0	420010
-----------------------------------	------------	--------

	FIG. NO	PAGE
<b>Y0[SERVICE KIT AND COMPONENT PARTS]</b>		
SHOE BOLT AND NUT SERVICE KIT .....	Y0320-01A0	450010
TRACK LINK (LUBRICATE TYPE) (HEAVY DUTY) (SUPPLY PARTS) .....	Y0322-01A6	450020
TRACK LINK (LUBRICATE TYPE) (HEAVY DUTY) (SUPPLY PARTS) (FOR TRIMING) .....	Y0322-01A7	450030
TRACK LINK (LUBRICATE TYPE) (HEAVY DUTY) (ABRASIVE RESISTANT TYPE BUSHING) (SUPPLY PARTS) .....	Y0322-01A8	450040
BLADE LIFT CYLINDER (INNER PARTS) .....	Y1620-01A0	450050
LADE ANGLE CYLINDER (INNER PARTS) .....	Y1620-21A0	450060
BLADE TILT CYLINDER (INNER PARTS) .....	Y1620-31A0	450070
RIPPER CYLINDER (INNER PARTS) .....	Y1621-01A0	450080
CONTROL VALVE (3-SPOOL) (1/4) .....	Y1663-01A0	450090
CONTROL VALVE (3-SPOOL) (2/4) .....	Y1663-02A0	450100
CONTROL VALVE (3-SPOOL) (3/4) .....	Y1663-03A0	450110
CONTROL VALVE (3-SPOOL) (4/4) .....	Y1663-04A0	450120
CONTROL VALVE (4-SPOOL) (1/7) (FOR RIPPER) .....	Y1664-01A0	450130
CONTROL VALVE (4-SPOOL) (2/7) (FOR RIPPER) .....	Y1664-02A0	450140
CONTROL VALVE (4-SPOOL) (3/7) (FOR RIPPER) .....	Y1664-03A0	450150
CONTROL VALVE (4-SPOOL) (4/7) (FOR RIPPER) .....	Y1664-04A0	450160
CONTROL VALVE (4-SPOOL) (5/7) (FOR RIPPER) .....	Y1664-05A0	450170
CONTROL VALVE (4-SPOOL) (6/7) (FOR RIPPER) .....	Y1664-06A0	450180
CONTROL VALVE (4-SPOOL) (7/7) (FOR RIPPER) .....	Y1664-07A0	450190
PPC VALVE .....	Y1670-01A0	450200
<b>ZZ [INDEX]</b>		
NUMERICAL INDEX .....	ZZ	

