



Hood Primary Latch Release Cable Replacement

Removal Procedure

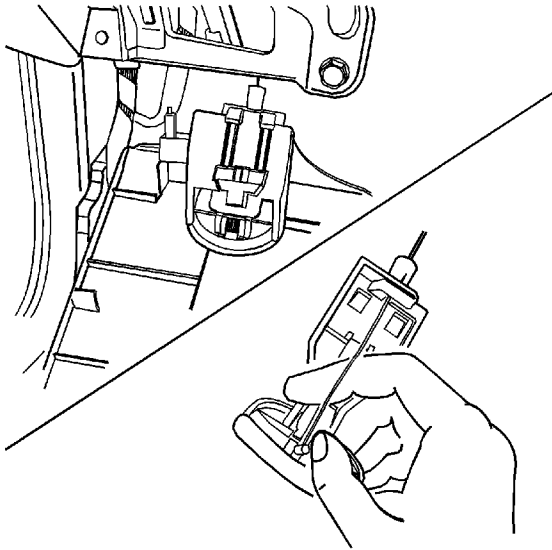


1. Pull out the hood release handle in order to access the screws.
2. Remove the screws and the hood release handle from the instrument panel.

Caution: Refer to [Vehicle Lifting and Jacking Caution](#) in the Preface section.

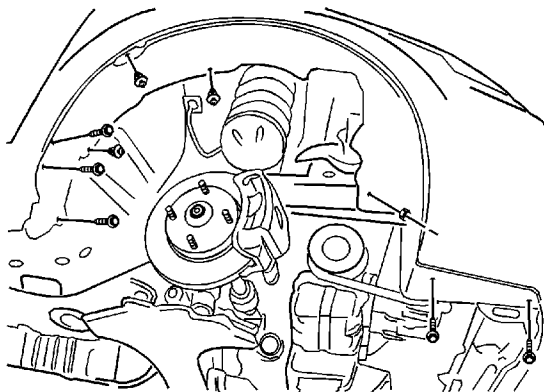




3. Raise and suitably support the vehicle.
4. Remove the front wheel. Refer to [Tire and Wheel Removal and Installation](#).
5. Remove the screws and the splash shield.

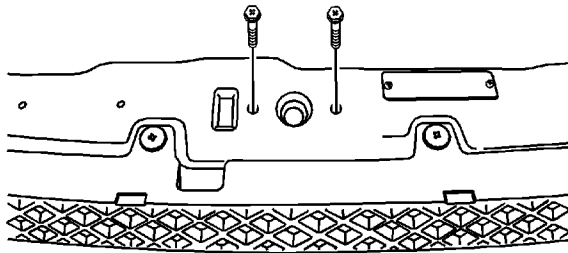


6. Open the hood.
7. Remove the screws and the hood secondary latch.

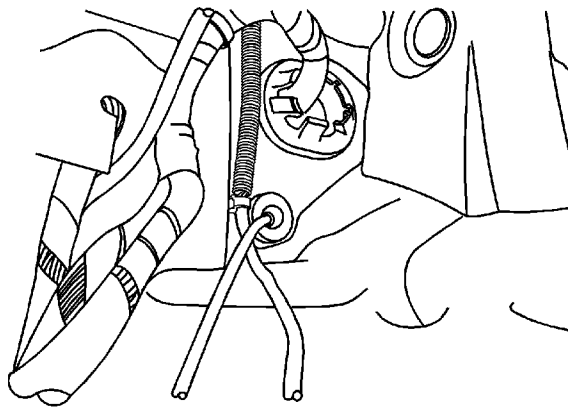


8. Remove the cable from the hood release handle.
9. Remove the cable from inside the vehicle.

Installation Procedure

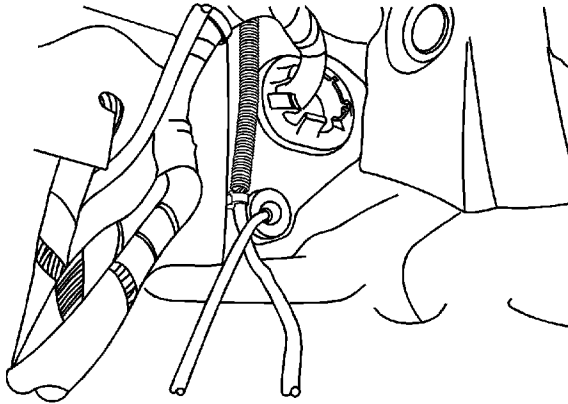


1. Install the cable from inside the vehicle.
2. Install the cable to the hood release handle.


Caution: Refer to [Fastener Caution](#) in the Preface section.

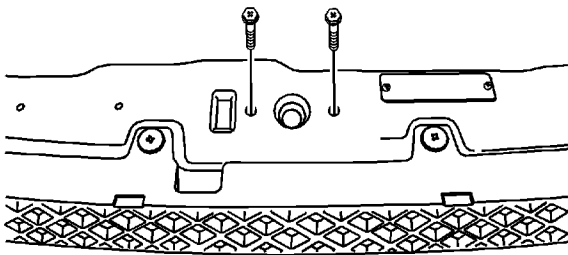

3. Install the screws and the hood secondary latch and tighten to **8 N·m (71 lb in)**.

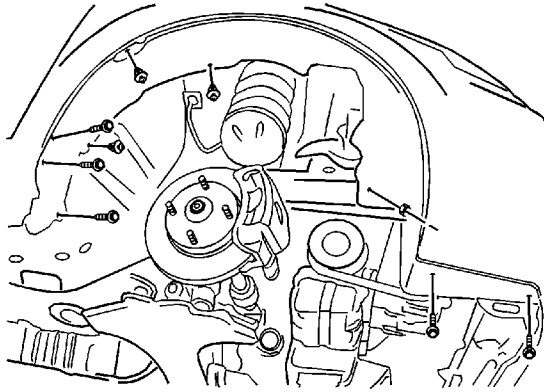

4. Install the splash shield with the screws and tighten to **1.5 N·m (13 lb in)**.

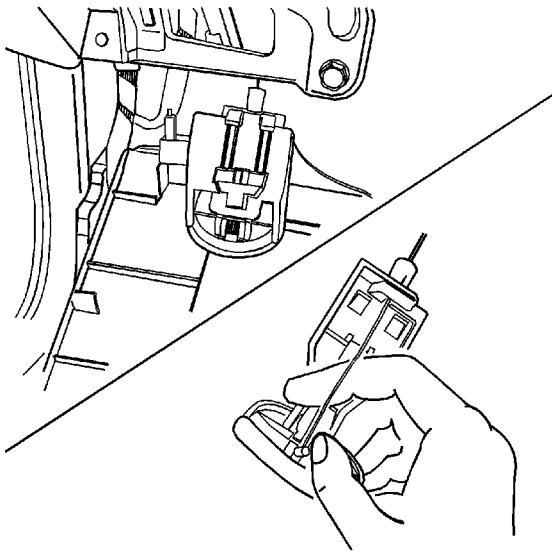


5. Install the front wheel. Refer to [Tire and Wheel Removal and Installation](#).
6. Lower the vehicle.
7. Install the hood release on the instrument panel with the screws and tighten to **1.5 N·m (13 lb in)**.


Front Side Door Replacement

Removal Procedure

Warning: Refer to [Battery Disconnect Warning](#) in the Preface section.

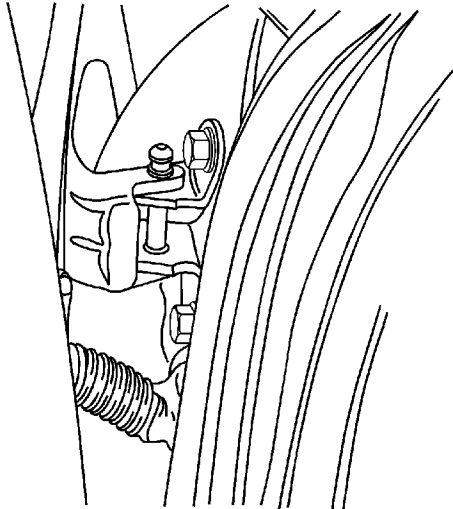


1. Disconnect the negative battery cable.
2. Remove the door hold open link. Refer to [Door Check Link Replacement](#).
3. Remove the body-to-door rubber grommet and the electrical wires.
4. With the aid of another technician, remove the bolts and the front door.

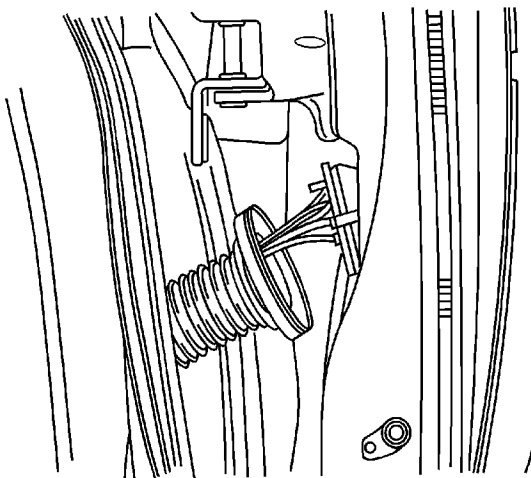




5. Disconnect the body-to-door rubber grommet and the electrical connector.

Installation Procedure

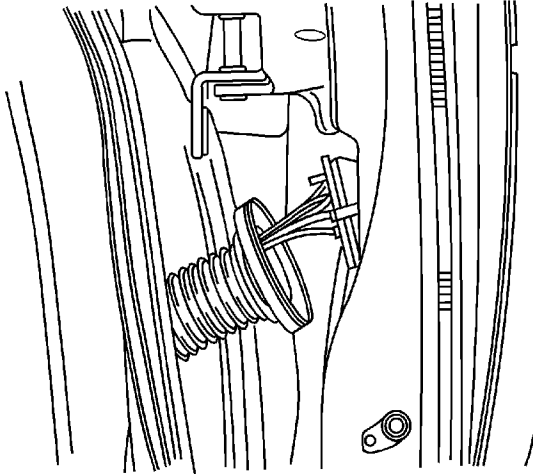

1. Connect the electrical connector and the body-to-door rubber grommet.

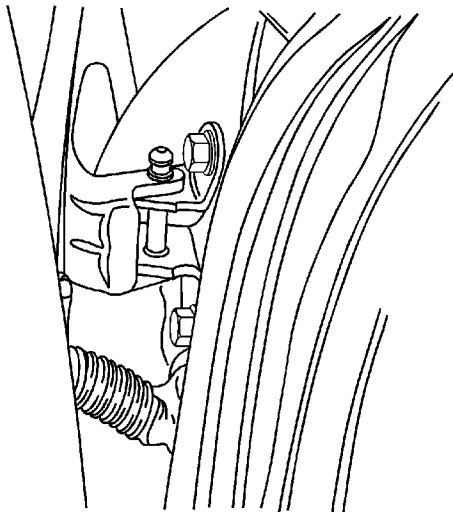

2. With the aid of another technician, lightly secure the front door with the bolts.

Caution: Refer to [Fastener Caution](#) in the Preface section.

3. Adjust the door for proper fit.


Tighten

- Tighten the door hinge-to-body bolts to 35 N·m (26 lb ft).
 - Tighten the door hinge-to-door bolts to 15 N·m (11 lb ft).
4. Install the door hold open link. Refer to [Door Check Link Replacement](#).
 5. Connect the negative battery cable.
 6. Perform the waterleak test. Refer to [Waterleak Test Preparation](#).
 7. Check for windnoise. Refer to [Air/Wind Noise](#).


Rear Door Replacement

Removal Procedure

Warning: Refer to [Battery Disconnect Warning](#) in the Preface section.

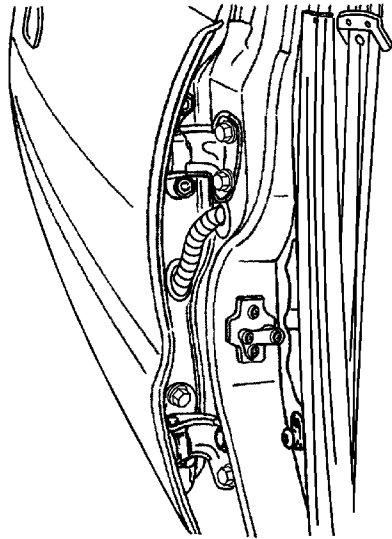


1. Disconnect the negative battery cable.
2. Remove the door hold open link. Refer to [Door Check Link Replacement](#).
3. With the aid of another technician, remove the bolts and the rear door.

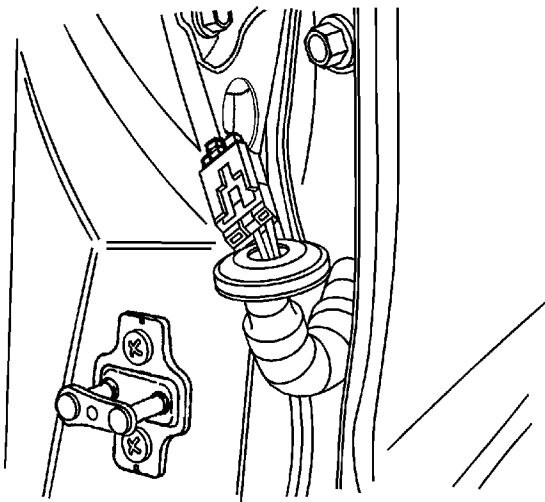


© 2010 General Motors Corporation. All rights reserved.

4. Disconnect the body-to-door rubber grommet and the electrical connector.

Installation Procedure

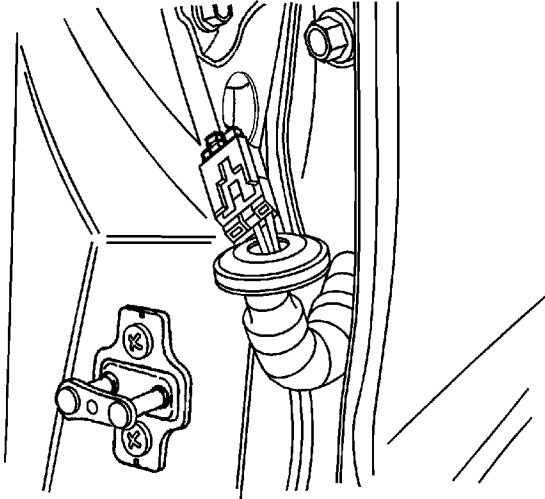

1. Connect the body-to-door rubber grommet and the electrical connector.

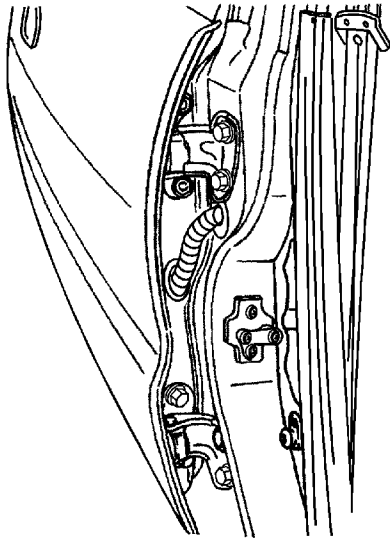

2. With the aid of another technician, lightly secure the rear door with the bolts.

Caution: Refer to [Fastener Caution](#) in the Preface section.

3. Adjust the door for proper fit.


Tighten

- Tighten the door hinge-to-body bolts to 35 N·m (26 lb ft).
 - Tighten the door hinge-to-door bolts to 15 N·m (11 lb ft).
4. Install the rear door hold open link. Refer to [Door Check Link Replacement](#).
 5. Connect the negative battery cable.
 6. Perform the waterleak test. Refer to [Waterleak Test Preparation](#).
 7. Check for windnoise. Refer to [Air/Wind Noise](#).


Front Fender Replacement (Notchback)

Removal Procedure

Caution: Refer to [Vehicle Lifting and Jacking Caution](#) in the Preface section.

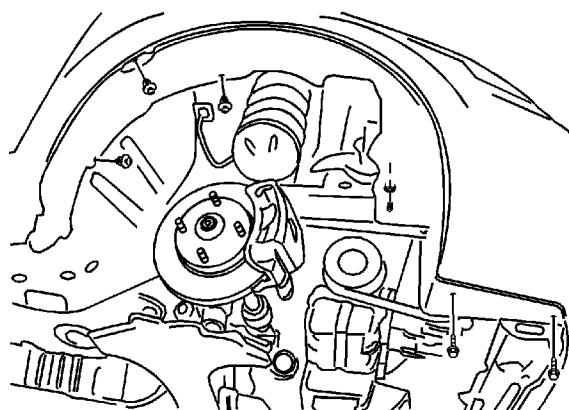


1. Raise and suitably support the vehicle.
2. Remove the necessary bolts from the splash shield.
3. Remove the headlamp assembly. Refer to [Headlamp Replacement](#).
4. Remove the two screws attaching the front fascia to the fender.

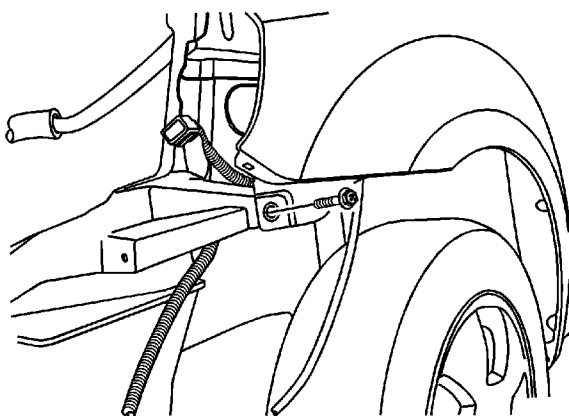





5. Remove the screws underneath the front bumper fascia.

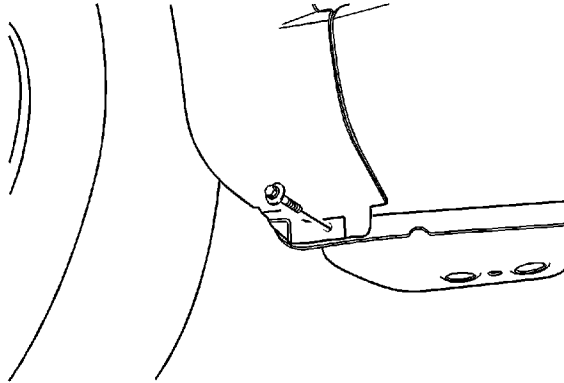

6. Remove the bolt at the base of the fender.
7. Remove the air inlet panel. Refer to [Air Inlet Grille Panel Replacement](#).

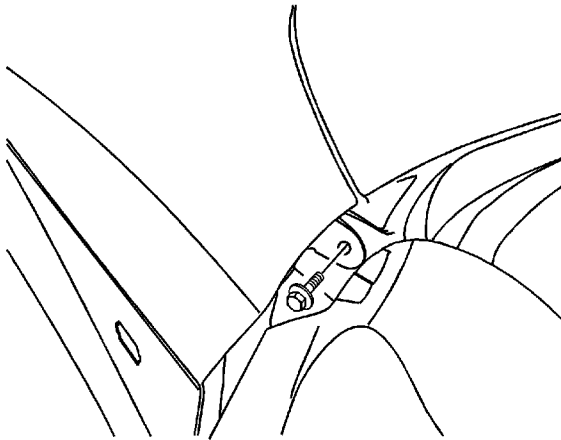


8. Open the front door. Remove the bolt at the base of the windshield pillar.

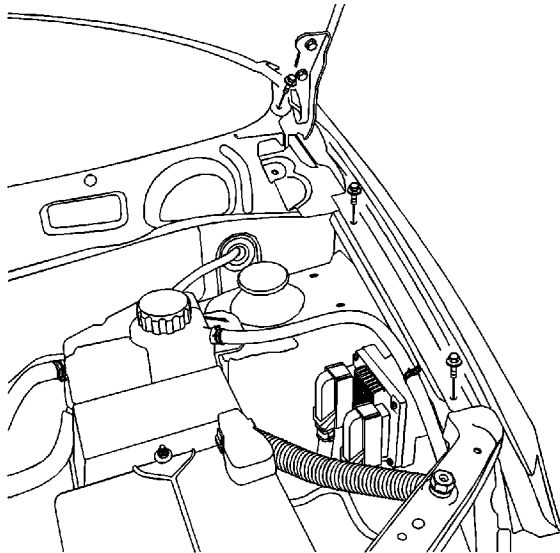

9. Remove the bolts along the top of the fender.
10. Remove the repeater lamp. Refer to [Repeater Lamp Replacement](#).
11. Remove the fender.


Installation Procedure

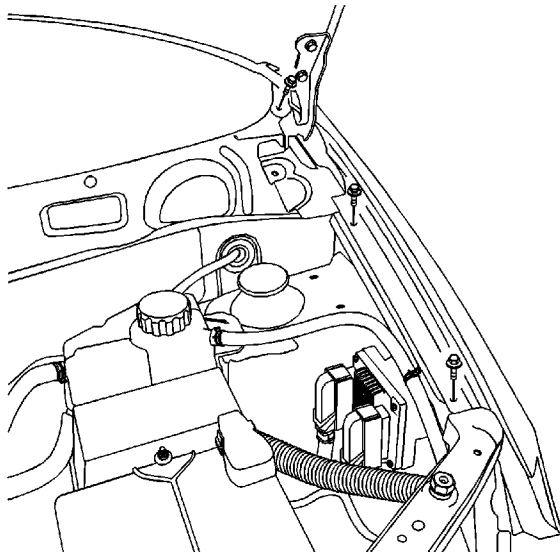


1. Install the fender.
2. Install the repeater lamp. Refer to [Repeater Lamp Replacement](#).

Caution: Refer to [Fastener Caution](#) in the Preface section.


3. Install the bolts along the top of the fender and tighten to **10 N·m (89 lb in)**.

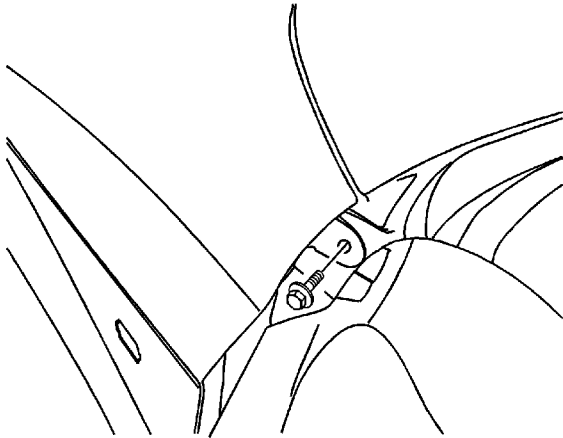


4. Install the bolt at the base of the windshield pillar and tighten to **8 N·m (71 lb in)**.
5. Install the air inlet panel. Refer to [Air Inlet Grille Panel Replacement](#).

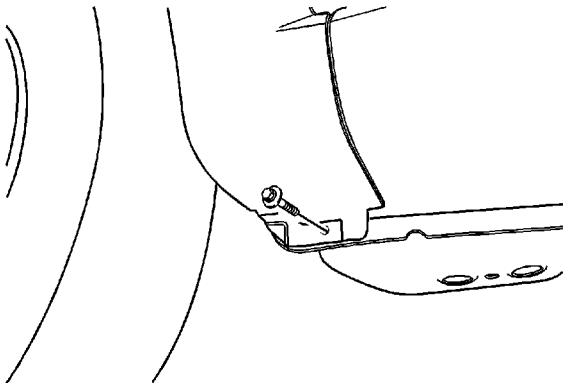

6. Install the bolts at the base of the fender and tighten to **10 N·m (89 lb in)**.

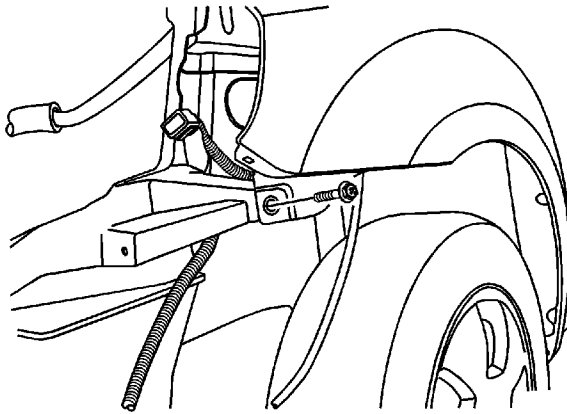

7. Secure the fender to the front bumper fascia with the screw and tighten to **1.5 N·m (13 lb in)**.
8. Secure the fender behind the front bumper fascia with the screws and tighten to **4 N·m (35 lb in)**.

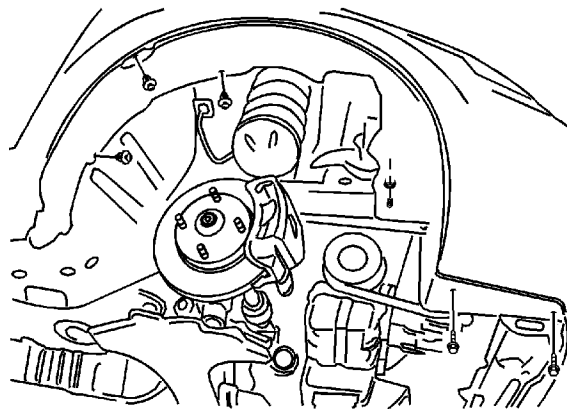


9. Install the necessary splash shield screws and tighten to **1.5 N·m (13 lb in)**.
10. Install the headlamp. Refer to [Headlamp Replacement](#).
11. Lower the vehicle.

Front Fender Replacement (Hatchback)


Removal Procedure

Caution: Refer to [Vehicle Lifting and Jacking Caution](#) in the Preface section.

1. Raise and suitably support the vehicle.
2. Remove the front wheel. Refer to [Tire and Wheel Removal and Installation](#).

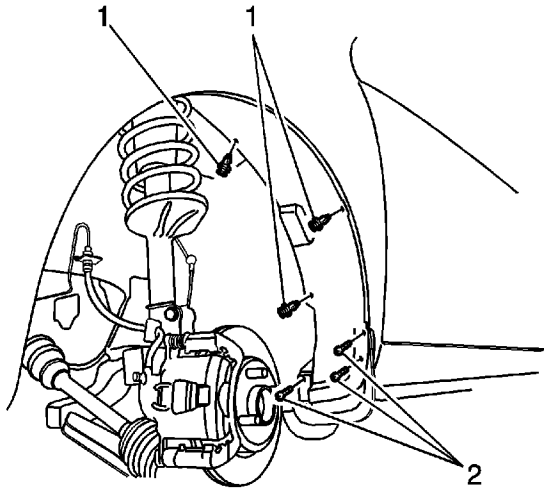


3. Remove the fender liner to mud guard bolts (2).
4. Remove the fender liner clips (1).

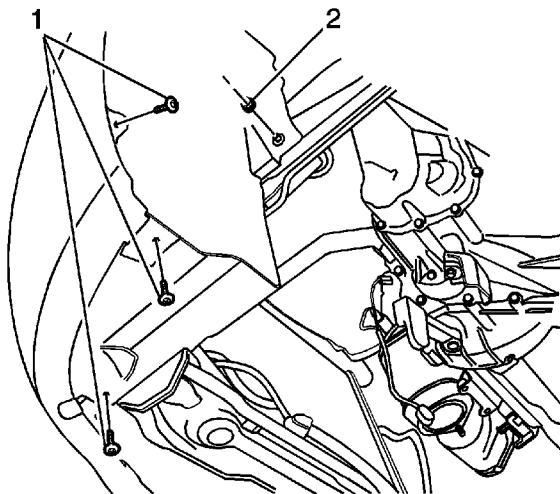





5. Remove the fender liner nuts (2) and screws (1).
6. Remove the fascia grille. Refer to [Fascia Grille Replacement](#).
7. Remove the front fascia. Refer to [Front Bumper Fascia Replacement](#).
8. Remove the left side of the air inlet panel. Refer to [Air Inlet Grille Panel Replacement](#).
9. Remove the side marker lamps. Refer to [Front Side Marker Lamp Replacement](#).

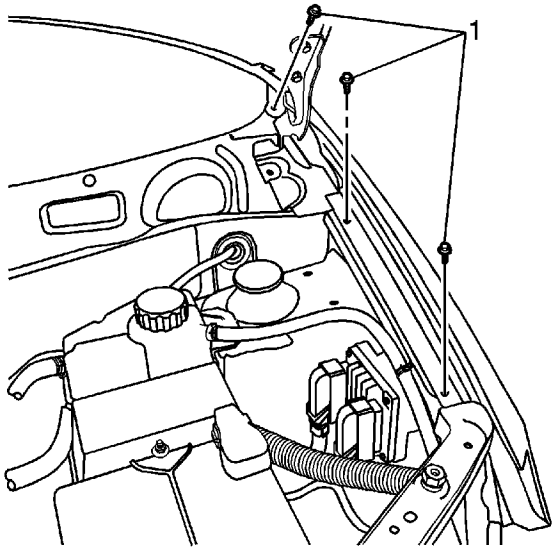


10. Remove the upper fender bolts (1).

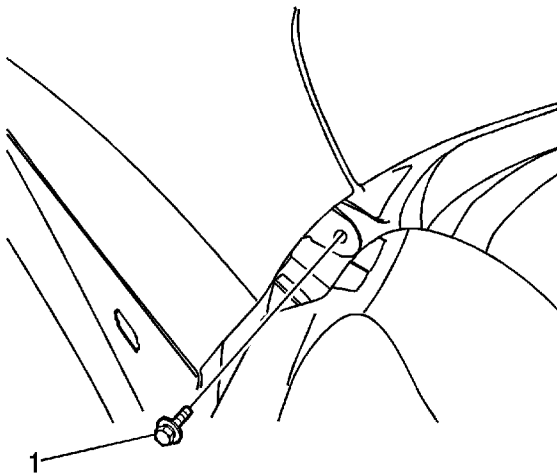

11. Open the front door. Remove the bolt at the base of the windshield pillar (1).

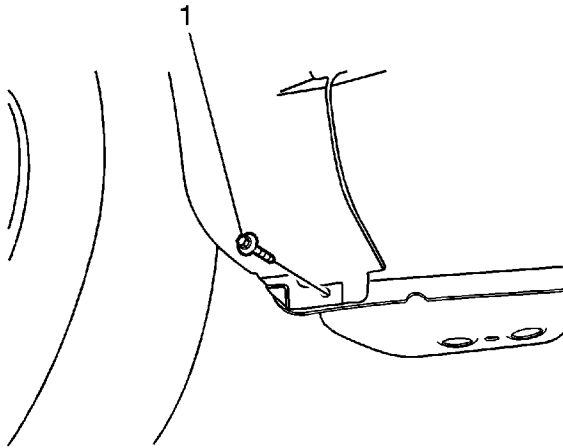


12. Remove the bolt (1) at the base of the fender.

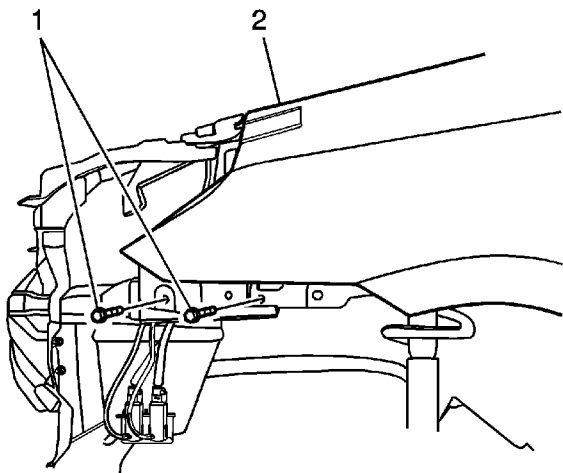

13. Remove the front fender bolts (1).
14. Remove the fender (2) from the vehicle.


Installation Procedure

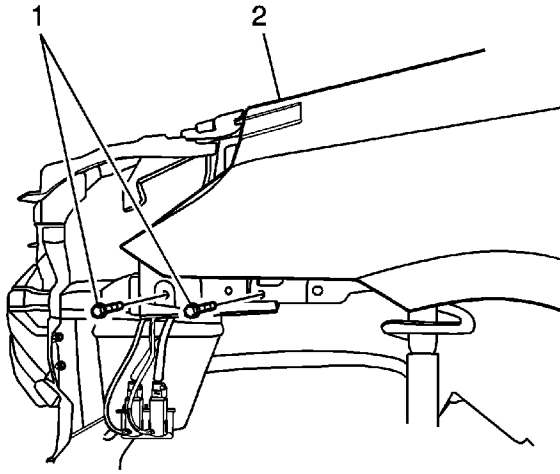


1. Install the fender (2) to the vehicle.

Caution: Refer to [Fastener Caution](#) in the Preface section.


2. Install the front fender bolts (1) and tighten to **8 N·m (71 lb in)**.

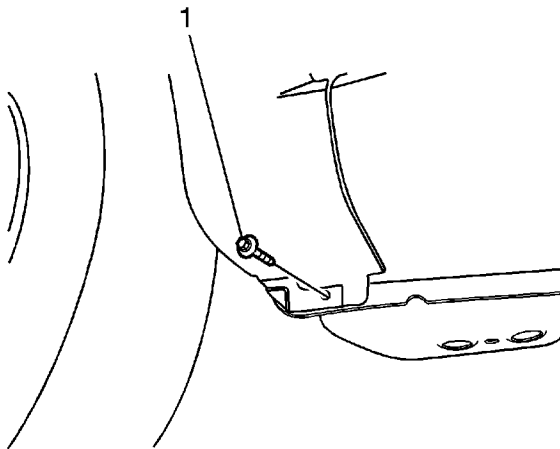


3. Install the bolt (1) at the base of the fender and tighten to **8 N·m (71 lb in)**.

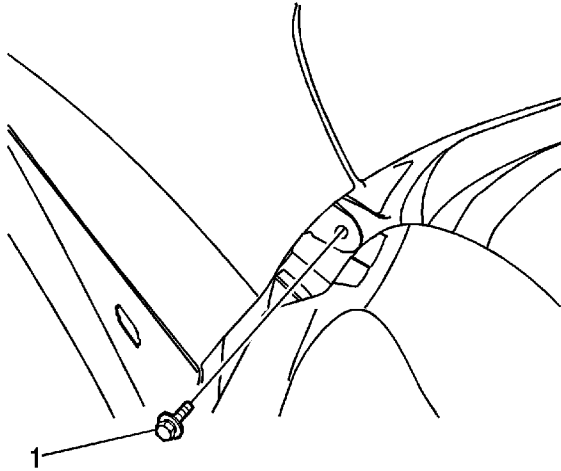

4. Install the bolt at the base of the Windshield Pillar (1) and tighten to **8 N·m (71 lb in)**.

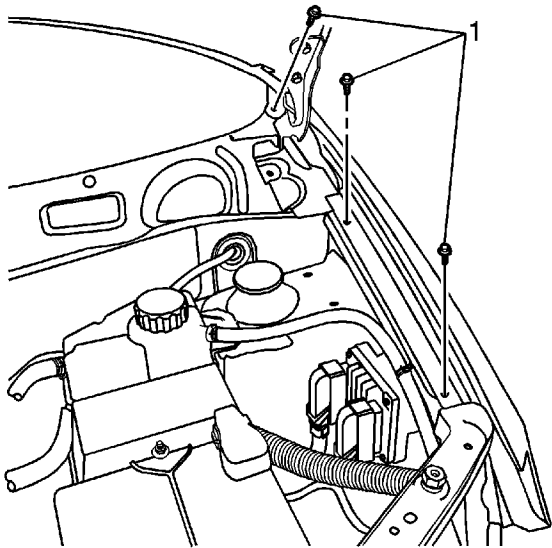

5. Install the upper fender bolts (1) and tighten to **8 N·m (71 lb in)**.
6. Install the side marker lamps. Refer to [Front Side Marker Lamp Replacement](#).
7. Install the left side of the air inlet panel. Refer to [Air Inlet Grille Panel Replacement](#).
8. Install the front fascia. Refer to [Front Bumper Fascia Replacement](#).
9. Install the fascia grille. Refer to [Fascia Grille Replacement](#).

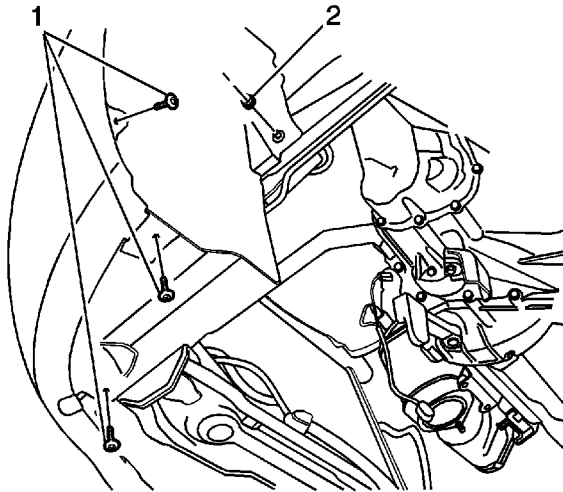


10. Install the fender liner nuts (2) and screws (1).

Tighten

Tighten the fender liner nuts to 13 N·m (113 lb in).

Tighten


Tighten the fender liner bolts to 1.5 N·m (13 lb in).

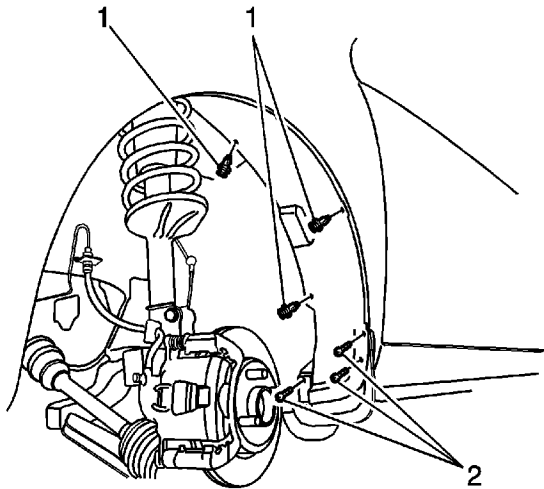

11. Install the fender liner clips (1).
12. Install the fender liner to mud guard bolts (2) and tighten to **1.5 N·m (13 lb in)**.
13. Install the front wheel. Refer to [Tire and Wheel Removal and Installation](#).
14. Lower the vehicle.

Liftgate Replacement


Removal Procedure

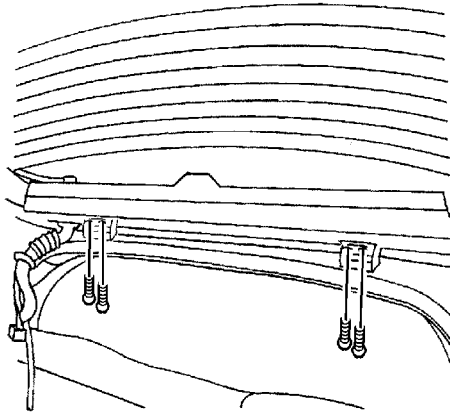

1. Open and suitably support the hatchback door.
2. Disconnect the hatchback door grommet, the electrical connector, and the washer hose.
3. Remove the gas support assemblies from the hatchback door and the body. Refer to [Liftgate Strut Replacement](#).
4. With the aid of another technician, remove the bolts and the hatchback door from the hinges.

Installation Procedure


Caution: Refer to [Fastener Caution](#) in the Preface section.

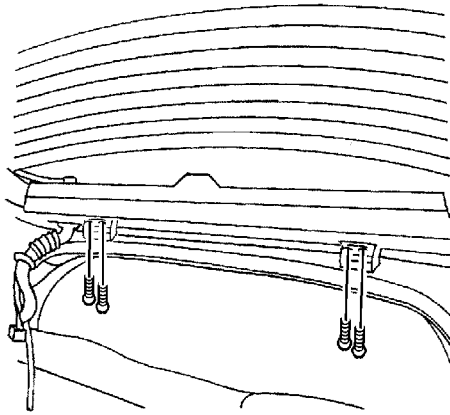

1. With the aid of another technician, install the hatchback door to the hinges with the bolts and tighten to **20 N·m (15 lb ft)**.
2. Install the gas support assemblies to the hatchback door and the body. Refer to [Liftgate Strut Replacement](#).
3. Connect the hatchback door electrical connector, the washer hose, and the grommet.
4. Close the hatchback door.


Door Hinge Replacement

Removal Procedure

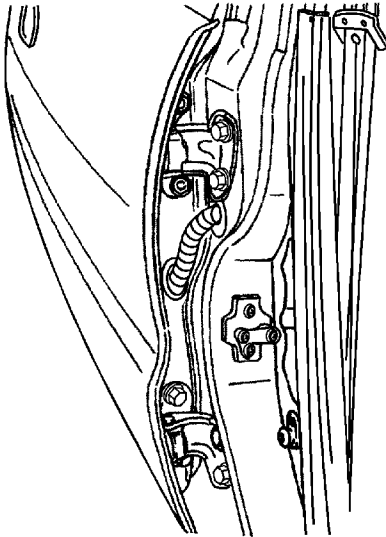

With the aid of another technician, remove the bolts and the hinge from the door and the body.

Installation Procedure

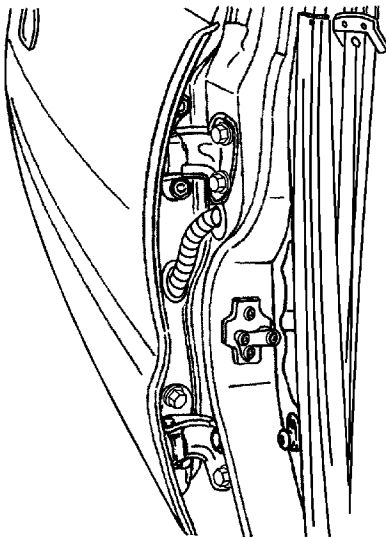



Caution: Refer to [Fastener Caution](#) in the Preface section.


With the aid of another technician, install the hinge to the door and the body with the bolts.

Tighten

- Tighten the door hinge-to-body bolts to 35 N·m (26 lb ft).
- Tighten the door hinge-to-door bolts to 15 N·m (11 lb ft).

Hood Hinge Replacement


Removal Procedure

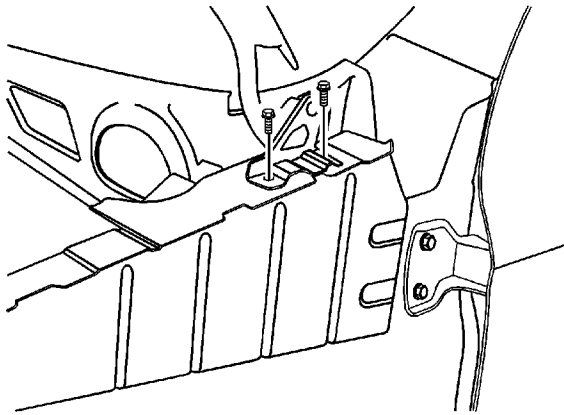

1. Remove the hood. Refer to [Hood Replacement](#).
2. Remove the bolts and the hinge.

Installation Procedure


Caution: Refer to [Fastener Caution](#) in the Preface section.

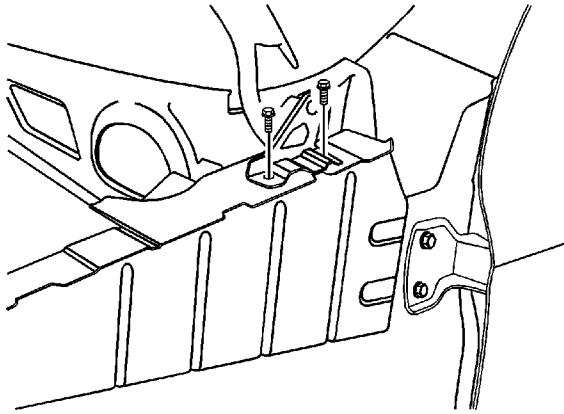

1. Install the hinge with the bolts and tighten to **20 N·m (15 lb ft)**.
2. Install the hood. Refer to [Hood Replacement](#).

Hood Replacement


Removal Procedure

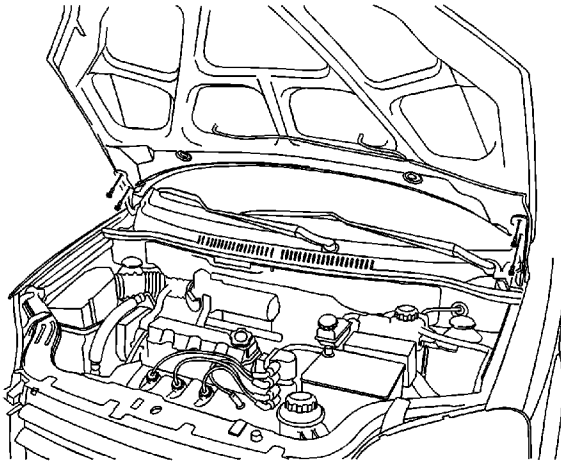

Note: Install protective coverings over the fenders and the windshield in order to prevent damage to the paint, the glass, and the moldings when removing and installing the hood.

1. Raise and support the hood.
2. Remove the washer hose.
3. Mark the position of the hinge to the hood in order to aid in alignment during installation.
4. Remove the bolts retaining the hood to both hinges.
5. With the aid of another technician, remove the hood from the hinges.

Installation Procedure

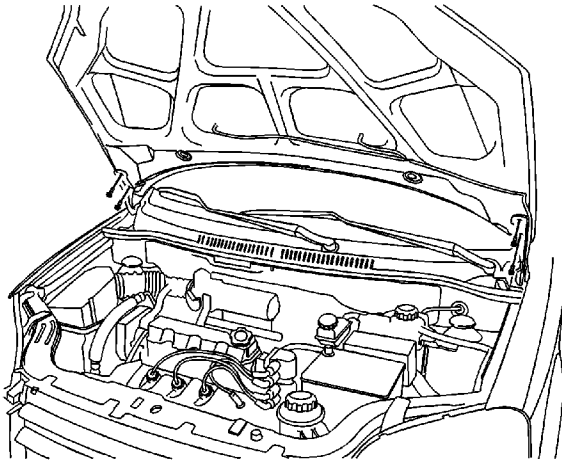


1. With the aid of another technician, position the hood in the location marked during removal.

Caution: Refer to [Fastener Caution](#) in the Preface section.

2. Install the 2 bolts securing the hood to each hinge and tighten to **20 N·m (15 lb ft)**.
3. Install the washer hose.
4. Inspect the hood for proper alignment.


Hood Primary and Secondary Latch Replacement

Removal Procedure

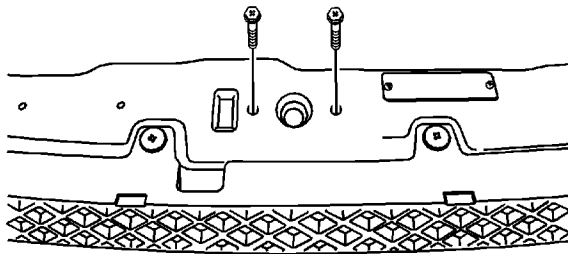

1. Open the hood.
2. Remove the screws and the hood latch.
3. Disconnect the hood release cable.

Installation Procedure

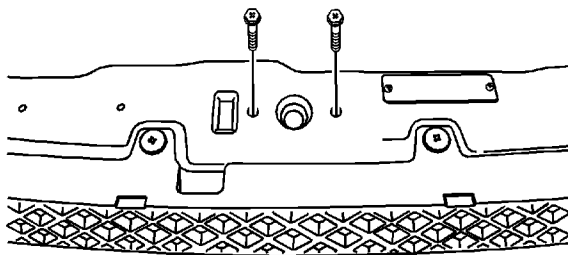



1. Connect the hood release cable to the latch.


Caution: Refer to [Fastener Caution](#) in the Preface section.

2. Install the hood latch with the screws and tighten to **8 N·m (71 lb in)**.

Rear Compartment Lid Replacement

Removal Procedure


Warning: Refer to [Battery Disconnect Warning](#) in the Preface section.

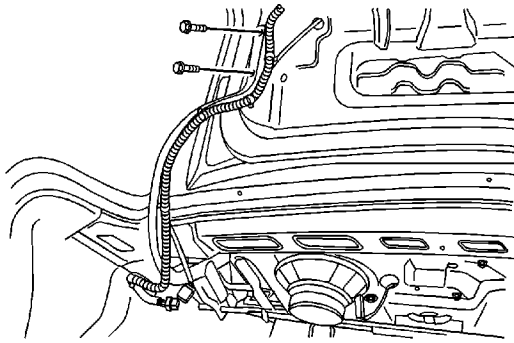

1. Disconnect the negative battery cable.
2. Disconnect the electrical connector.
3. Disconnect the electrical harness from the rear deck lid hinge arm.
4. Remove the bolts and the rear deck lid.

Installation Procedure


Caution: Refer to [Fastener Caution](#) in the Preface section.

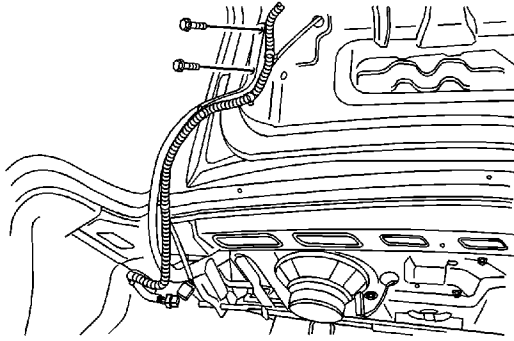

1. Install the rear deck lid with the bolts and tighten to **10 N·m (89 lb in)**.
2. Connect the electrical harness to the rear deck lid hinge arm.
3. Connect the electrical connector.
4. Connect the negative battery cable.

Door Check Link Replacement


Removal Procedure

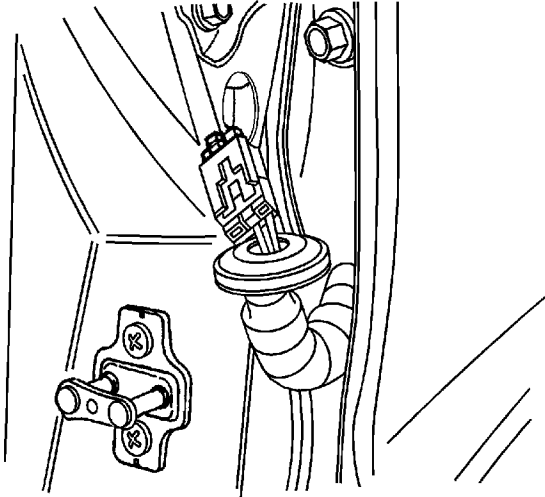

1. Remove the door trim panel. Refer to [Front Side Door Trim Panel Replacement](#).
2. Reposition the door seal trim.
3. Remove the bolts on the door and on the body.
4. Remove the door hold open link.

Installation Procedure

Caution: Refer to [Fastener Caution](#) in the Preface section.

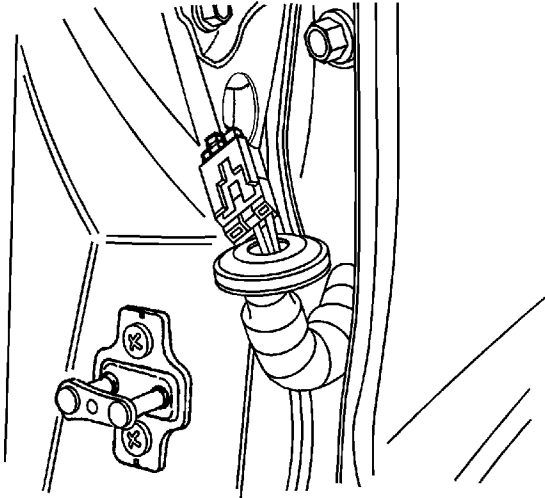


1. Install the door hold open link to the door and the body with the bolts.

Tighten

- Tighten the door hold open link-to-body bolts to 35 N·m (26 lb ft).
 - Tighten the door hold open link-to-door bolts to 5 N·m (44 lb in).
2. Reposition the door seal trim.
 3. Install the door trim panel. Refer to [Front Side Door Trim Panel Replacement](#).


Fuel Tank Filler Door Replacement

Removal Procedure

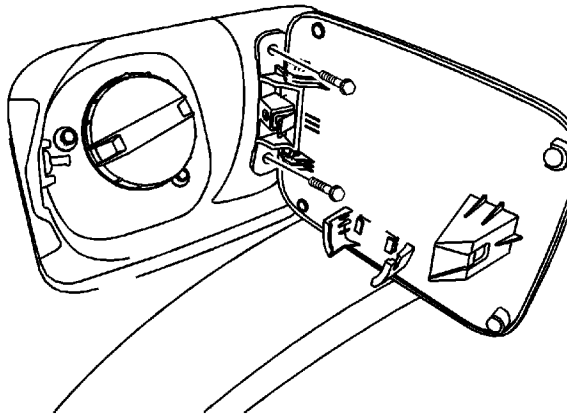

Remove the screws and the fuel filler door.

Installation Procedure

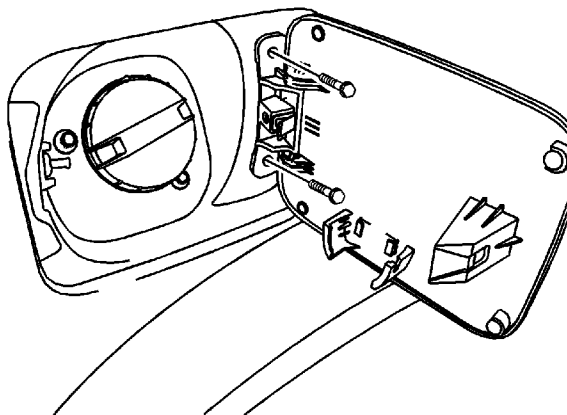




Caution: Refer to [Fastener Caution](#) in the Preface section.

Install the fuel filler door with the screws and tighten to **2 N·m (18 lb in)**.


Hood Hold-Open Rod Replacement

Removal Procedure

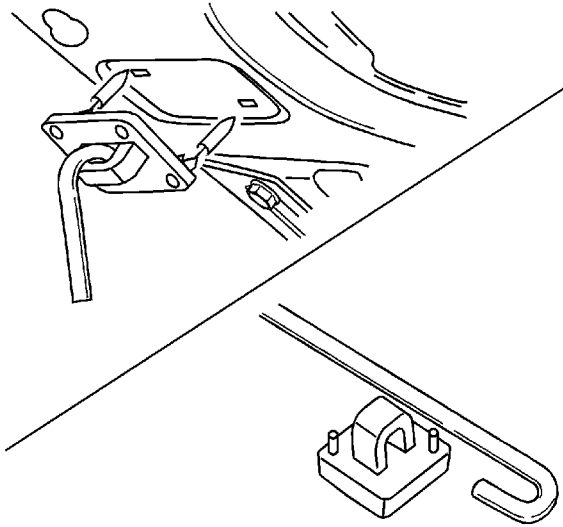

1. Support the hood in the open position.
2. Remove the hood prop rod by gently prying the base from the radiator support.

Installation Procedure

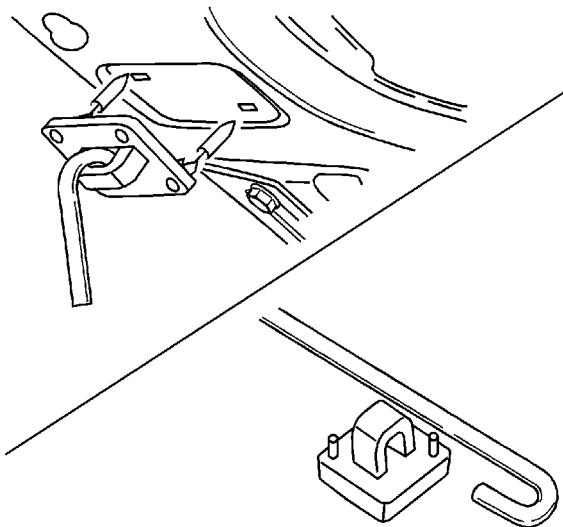




1. Install the hood prop rod by snapping the base back into the radiator support.
2. Close the hood.


Rear Compartment Lid Hinge Torque Rod Replacement

Removal Procedure

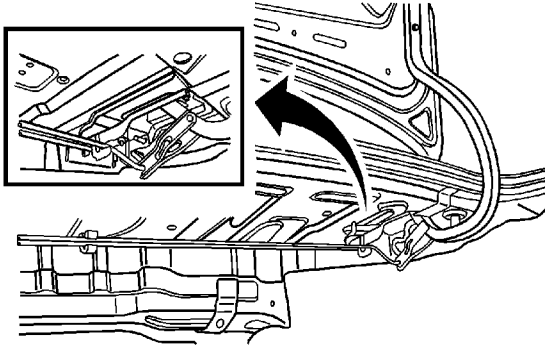

1. Remove the torque rod from the rear deck lid hinge arm.
2. Remove the torque rod from the hinges.

Installation Procedure

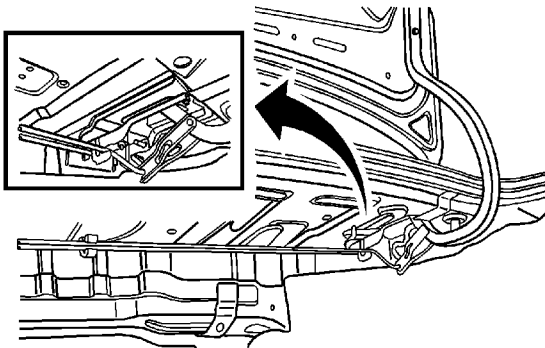




1. Install the torque rod onto the hinges.
2. Install the torque rod onto the rear deck lid hinge arm.

Liftgate Strut Replacement

Removal Procedure


Caution: Refer to [Liftgate Assist Rod Caution](#) in the Preface section.

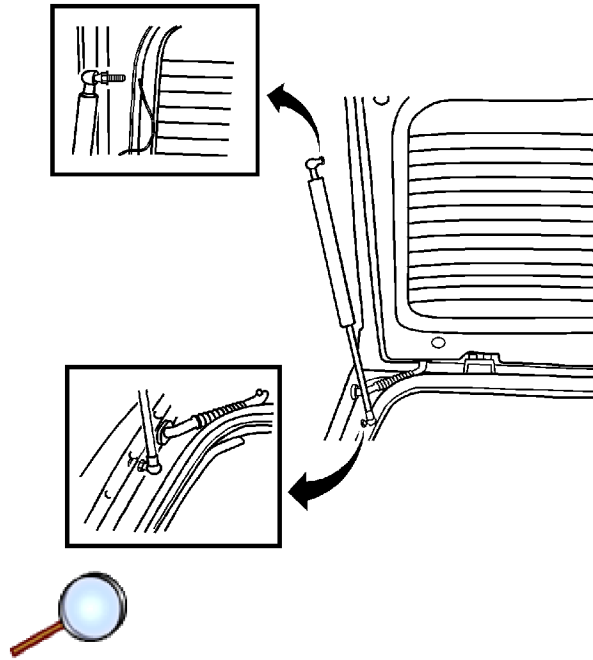

1. Open and suitably support the hatchback door.
2. Unscrew and remove the gas support assembly from the hatchback door and the body.

Installation Procedure


Caution: Refer to [Fastener Caution](#) in the Preface section.

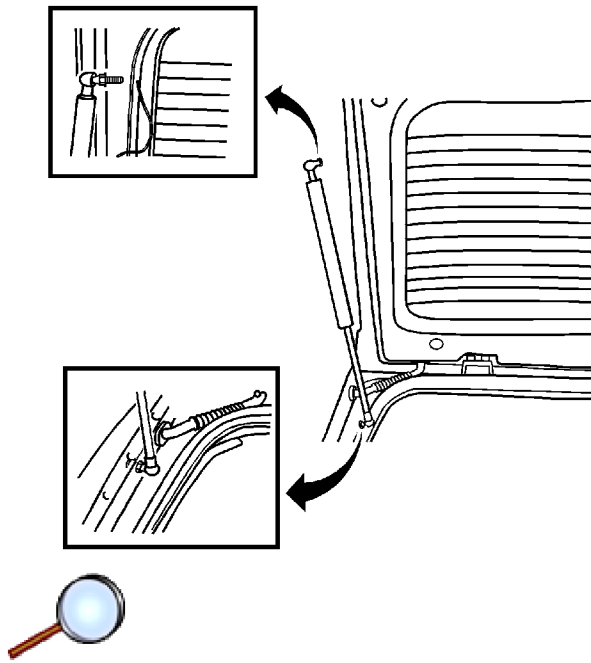

1. Install the gas support assembly onto the hatchback door and the body and tighten to **8 N·m (71 lb in)**.
2. Close the hatchback door.


Door Weatherstrip Replacement

Removal Procedure

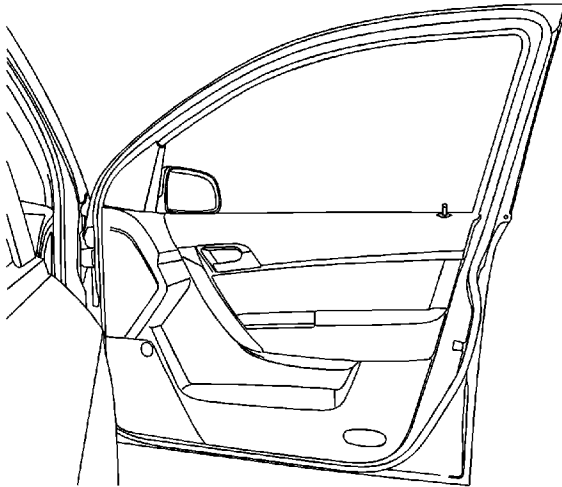

1. Remove the door hold open link-to-body bolt.
2. Remove the door weatherstrip.

Installation Procedure

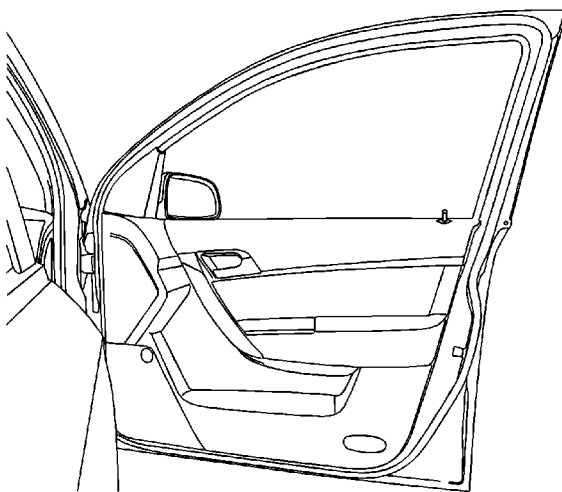




1. Install the door weatherstrip.

Caution: Refer to [Fastener Caution](#) in the Preface section.

2. Install the door hold open link to the body with the bolt and tighten to **35 N·m (26 lb ft)**.


Door Opening Weatherstrip Replacement

Removal Procedure

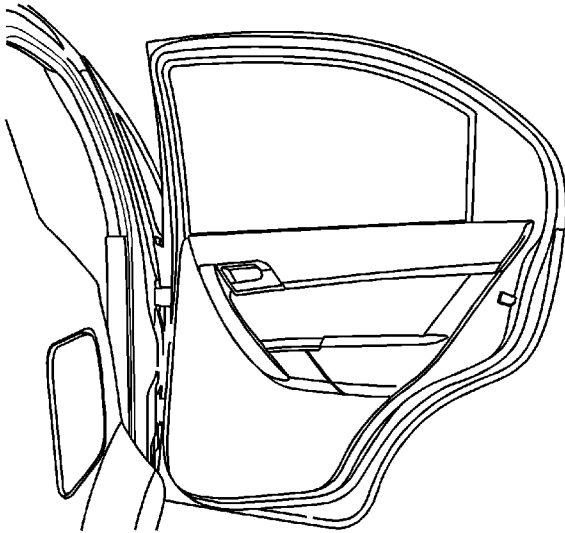

Remove the door opening weatherstrip.

Installation Procedure

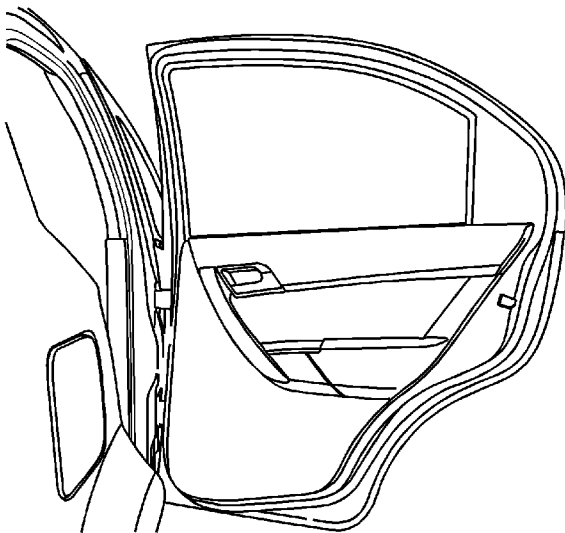




Install the door opening weatherstrip.


Rear Compartment Lid Weatherstrip Replacement

Removal Procedure

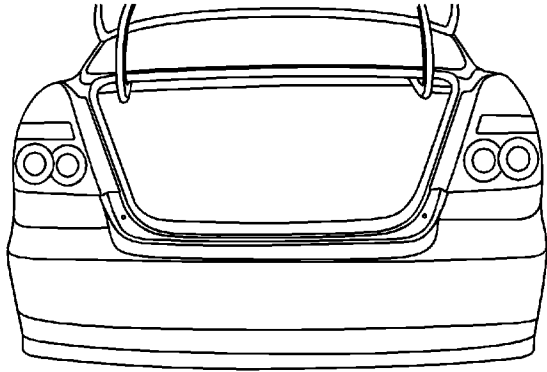

1. Open the luggage compartment lid.
2. Remove the luggage compartment rear trim panel. Refer to [Rear Compartment Trim Panel Replacement](#).
3. Remove the weatherstrip from around the gutter.

Installation Procedure

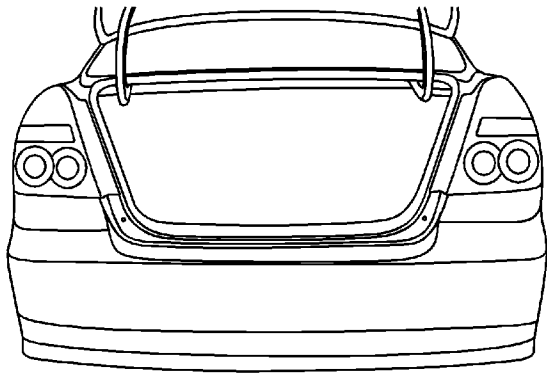

1. Install the weatherstrip onto the gutter flange.
2. Inspect the weatherstrip. Make sure that the clinch is completely seated onto the flange.
3. Using a water hose without a nozzle, test the rear deck lid to make sure that no leaks are present.
4. Install the luggage compartment rear trim panels. Refer to [Rear Compartment Trim Panel Replacement](#) .